

Purpose

Technique RRSALLOB sets whether observed river, reservoir and snow data are to be printed.

Valid values are NO (0) and YES (1).

The Global default value is NO (0).

This Technique is Universal.

Form of Input

RRSALLOB(integer)

where integer is 1 or 0 specifying whether or not to print data

Example

RRSALLOB(1)

The observed river, reservoir and snow data to be printed for all stations that have observations during the run period.